

656029, Platform, Spinning, 3D



1. Die-cut the Spinning Platform and fold along all crease lines. (It is not important which way it is folded; this is just to work the folds.)




2. Place the Platform face down with the cleft facing to the left as shown. Place double-sided tape inside the two triangles created by the folds.



3. Fold the Platform in half with the adhesive on the outside. Align the folded edge with the center crease of the card, making sure the larger triangle is against the card. Center the point of the triangle and adhere.



4. Remove the adhesive film from the small triangle and carefully unfold the Platform so that left side adheres to the card.

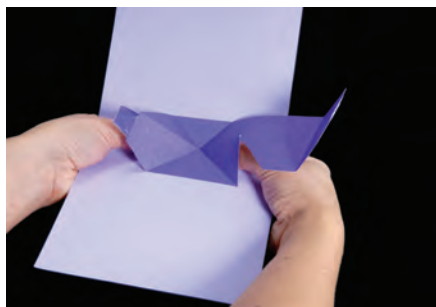


5. Slide a finger under both ends of the Platform while slowly closing the card. This will create the proper folds in the ends of the Platform.



6. Fold in the locking flaps on the bottom tab.



7. Bring top of Platform over to form a loop and insert tab into the slot of the top flap. Open the locking flaps and tape into place.

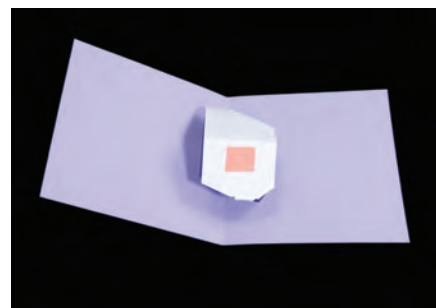

8. Adhere double-sided tape to face of Platform.



9. Place presentation object face down on the inside of the card with the top facing the outside edge of the card. Close the card so that the object adheres to the Platform.



10. This is a great way to present photos, CDs, DVDs and whatever else you can think of.