


# Sizzix® Pop 'n Cuts™ by Karen Burniston




1. Place magnetic Pop 'n Cuts insert inside the Base die so the magnets stick to the metal plate. Align the center fold of the insert with the marked center of the Base die as shown.



2. Die-cut desired material.

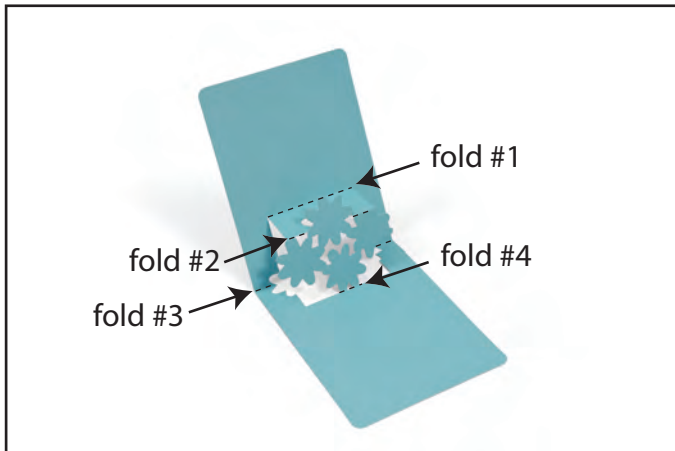

3. Fold on score lines to bring the pop-up image forward as shown. All Pop 'n Cuts are structured the same way, with four parallel folds; #1: a valley fold to bring the image forward, #2: a mountain fold at or near the top of the image, #3: a valley fold at the center of the card, and #4: a valley fold at the bottom of the image.

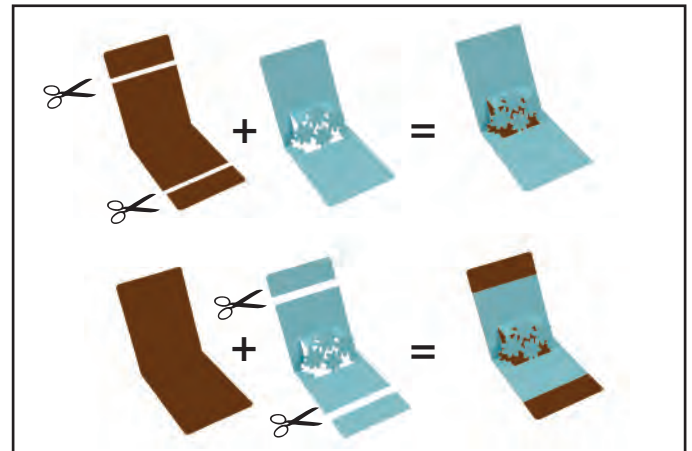

4. The Base die can be used without an insert to cut a backing piece for the card. For best results trim the length of either the outside or inside, piece. As an option, use a decorative edge.